

ASTRO EXPRESS 2 | HOT WATER DELIVERY SYSTEM | INSTALLATION AND OPERATING INSTRUCTIONS

File No: 10.817
Date: JULY 23, 2015
Supersedes: 10.817
Date: JUNE 3, 2015

1.0	Typical installations	1	6.0	Operation	3
2.0	How it works	1	7.0	Setting the clock/timer	4
3.0	Installation	1	8.0	Replacement parts	4
4.0	Procedures	1	9.0	Technical data	5
5.0	Rotating the circulator casing	3	10.0	Replacement parts	6

1.0 TYPICAL APPLICATIONS

The Armstrong Astro Express 2 hot water delivery system ensures that users have hot water at the tap when you need it, while helping to conserve water. It is easy to install, and does not require special return piping to the water heater.

Equipped with a high performance circulator and adjustable flowrate injection valve, the Astro Express 2 system is a “one-size-fits-all” solution for virtually any residential installation. The Astro Express 2 is the ideal solution for existing home retrofit where recirculation system return line installation is impractical, or new home construction where dedicated hot water return line installation is cost prohibitive.

2.0 HOW IT WORKS

Armstrong Astro Express 2 hot water delivery systems consist of a circulator for water heater mounting, and a valve for under-sink mounting. In operation, the timer activated circulator creates differential pressure across the Astro Express LF valve. When the water at the hot water faucet cools below the Astro Express LF valve’s low temperature setpoint, the valve opens, allowing the cooled water to be injected into the cold water line. When the water reaches the valve high temperature setpoint, the valve closes. The valve is equipped with a pressure independent flowrate adjustment to maintain the desired temperature balance. Additionally, the valve is equipped with a check valve to prevent cold water backflow when the hot water faucet is opened.

3.0 INSTALLATION

WARNING



- Installation should only be completed by qualified personnel, in accordance with all applicable codes, and following generally accepted installation practices.

- Ensure the hot and cold water supply is turned off before installation, to avoid personal injury or damage to property.
- Read and understand these instructions thoroughly before beginning installation.

CAUTION



- Prior to installation flush all piping of any foreign material to prevent pump blockage and prevent damage.



4.0 PROCEDURES

1 Timer installation and wiring

WARNING



Electrical shock hazard - Verify that the electrical rating of the device matches the values shown on the nameplate of the circulator.

All electrical work should be performed by a qualified electrician in accordance with the latest edition of the National Electric Code, local codes and regulations. Failure to follow these instructions could result in serious injury, death and/or property damage.

Note: Numerical component designations included in Steps 1 through 8 refer to circulator and timer components shown in FIG. 1. Steps 1 & 3 apply to retrofit installations.

- 1 Disconnect the electrical supply to the circulator
 - Note:** Numerical component designations included in Steps 2 through 8 refer to circulator and timer components shown in FIG. 1.
- 2 Unfasten the mounting 2 screws (4) and remove the terminal box cover (3).
- 3 Disconnect wire leads from the power supply.
- 4 Connect power supply wires (black, white and green) to the timer unit and to the circulator terminals (as shown in FIG. 2).
 - Note:** Lead Wiring Specification - Minimum, 6" (152 mm) long, 14 AWG, rated minimum 140°F (60°C). Provided with R/C crimp connectors for attachment to the ground.
- 5 Place the timer box cover (5) using the 2 mounting screws (4). Insure that all lead wires are inside the timer assembly.
- 6 Program the timer according to instructions provided on page 6.
- 7 Connect the unit to electrical supply.
- 8 Start the circulator.

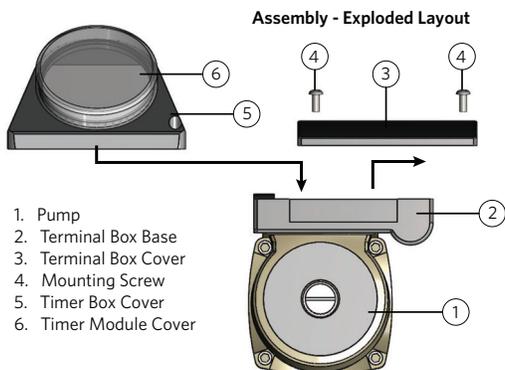


FIG. 1 - Astro 2 series circulator and 24-hour timer assembly drawing

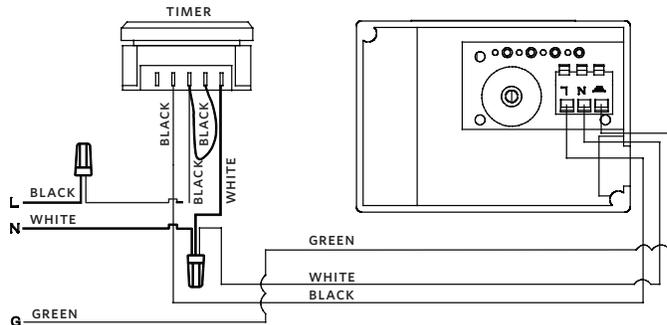



FIG. 2 - Astro 2 series circulator and 24-hour timer wiring diagram

- 2 To mount the Astro Express 2 circulator:
 - A Turn off water supply. If necessary, drain the hot water distribution pipes and partially empty the water heater.
 - B Disconnect the hot water distribution pipe from the water heater outlet.
 - C Connect the Astro Express 2 circulator inlet to the water heater outlet nipple.
 - D Connect the distribution pipe to the circulator outlet.
- 3 To mount the Astro Express 2 circulator:
 - A The circulator shaft is horizontal.
 - B The clock/timer face is accessible for viewing and adjustment.
 - C The direction of water flow matches the arrow on the circulator casing.
 - D The piping is sufficiently rigid to support the system in operation.
 - E Neither the clock/timer nor black terminal box is under the circulator.
- 4 If the arrow on the circulator casing is not pointing away from the hot water heater, see **Rotating the circulator casing**.
- 5 To mount the Astro Express LF valve:
 - A Select the faucet to be controlled, typically the furthest faucet from the hot water heater. For multi-branch hot water piping runs, a valve may be required at the end of each branch for maximum effectiveness.
 - B Disconnect the hot and cold supply pipes from the faucet.
 - C Connect the hot and cold water supply to the Astro Express LF valve ½" threaded inlets (stainless steel flex hose recommended).

- D Connect the hot and cold Astro Express LF valve $\frac{3}{8}$ " threaded outlets to the faucet (stainless steel flex hose recommended).
 - E Secure the valve to the wall under the sink, using the plastic wall anchor and screw.
- 6 Check the installation for leaks:
- A Ensure the faucet is closed.
 - B Turn on the water supply.
 - C Open the hot and cold water supply valves.
 - D Open the faucet hot and cold taps to purge all air from the system. Close the faucet.
 - E Inspect the circulator and valve connections for leakage. If a leak exists, close hot and cold supply valves until leaks are corrected.
- 7 To connect power to the circulator:
- A Verify that the timer's manual override switch is in the **OFF** position.
 - B Plug the power cord into a standard 115 Vac household electrical receptacle.
 - C To perform initial system test, see **OPERATION**.

5.0 ROTATING THE CIRCULATOR CASING

Prior to connecting the system to the hot water piping, if alternate orientation of either the circulator discharge or clock timer is required, proceed as follows:

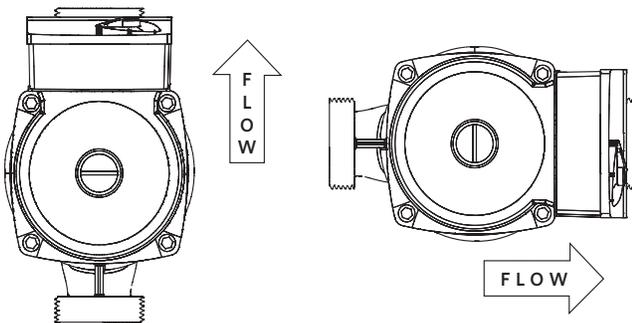

- 1 Remove the four hex socket head screws that hold the casing to the circulator.
- 2 Gently pull the casing from the circulator body, taking care not to damage the gasket or impeller.
- 3 Rotate the casing as required to meet circulator discharge and clock timer orientation requirements.
- 4 Tighten the four hex socket head screws evenly; ensuring the gasket seals the mating surfaces.

- 5 To verify the circulator shaft still spins freely:
 - A Remove the plug from the end of circulator with a slotted screwdriver.
 - B Insert the screwdriver in the slot in the end of the shaft.
 - C Ensure the shaft turns freely and smoothly in both directions.
 - D Replace the plug and gently tighten.

6.0 OPERATION



CAUTION

Never operate the system **DRY** or permanent damage may occur to the circulator. Never shut off the water supply or restrict flow in any way while the circulator is operating.

- 1 Verify water is present at the circulator.
- 2 Verify the power cord is plugged into an appropriate household electrical outlet.
- 3 To continuously run the circulator or test for initial operation, set the manual override switch to the **ON** position and verify the circulator operates smoothly and quietly.
- 4 For normal automatic operation, set the clock/timer as required and move the manual override switch to the **AUTO** position.
- 5 To prevent circulator operation (for example, when the occupants will be away from the residence for an extended period of time) set the manual override switch to the **OFF** position.


7.0 SETTING THE CLOCK/TIMER

- 1 Rotate the dial in a clockwise direction until both the time shown, and the appropriate **AM** or **PM** indicator, correspond to the current time of day. This adjustment is required for initial operation, following a power interruption, to adjust for daylight savings time, or for periodic time correction.
- 2 Remove the clear plastic cover from the dial.
- 3 The outer ring of the dial has an adjustable tab for each 15 minute time interval of a 24 hour day. To enable circulator operation for a specific time interval, slide the corresponding interval tab to the outer position. All tabs positioned toward the center of the dial disable circulator operation for those time intervals.
- 4 Verify the manual override switch is in the **AUTO** position.
- 5 Replace the clear plastic cover on the dial.


For maximum energy savings, set the timer to:

- 1 Activate the circulator at least ½ hour before initial hot water demand for the day is anticipated.
- 2 Deactivate the circulator when the anticipated hot water demand for the day ends.

MANUAL OVERRIDE

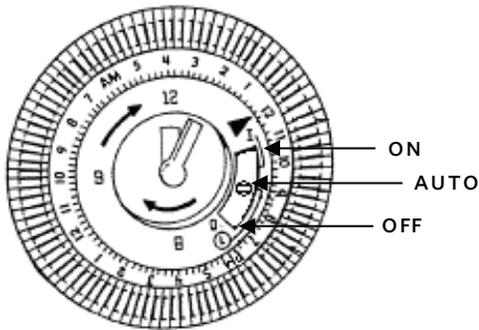

SWITCH POSITIONS

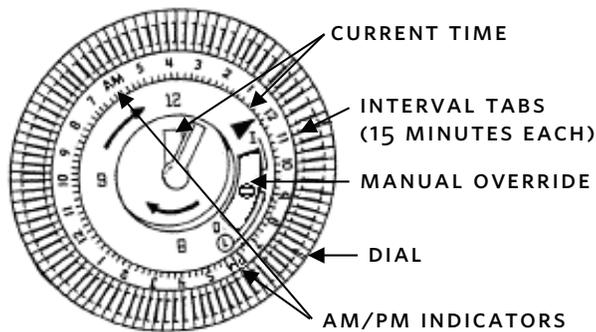


8.0 SETTING THE VALVE

The Astro Express LF valve is factory set to suit most applications. The valve may be easily adjusted to suit application conditions and personal preferences.

- 1 To increase the water temperature at the hot-water tap, turn the flowrate adjustment counter clock-wise one or two increments.
- 2 To decrease the water temperature at the cold-water tap, turn the flowrate adjustment clock-wise one or two increments.
- 3 To completely stop flow through the valve, turn the valve completely closed by turning the flowrate adjustment fully clockwise.

If necessary to achieve the desired water temperature control, set the circulator timer to cycle the circulator on/off during the anticipated hot water demand period, in combination with valve adjustment.

Allow ample time (at least several hours) after valve or timer adjustment, for the system temperature to stabilize, prior to evaluating the result of the adjustment.

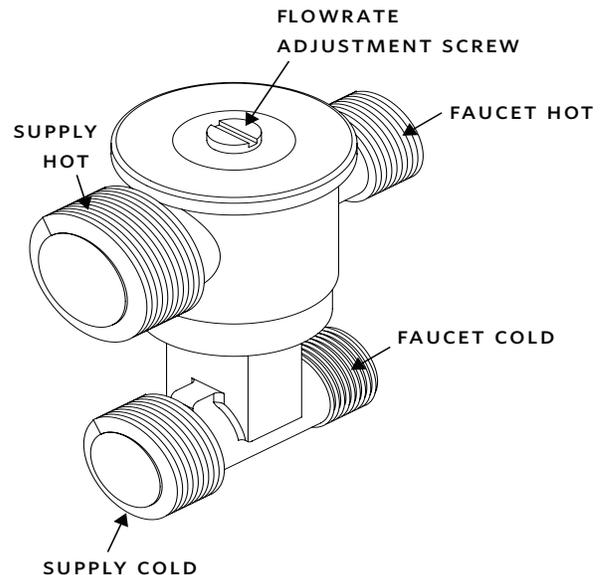

9.0 TECHNICAL DATA

ASTRO EXPRESS 2 CIRCULATOR	ASTRO 220SSU
Max. power consumption	33W, 0.29A
Max. head	5.5 ft (1.7 m)
Max. flow	10 GPM (0.63 L/s)
Default operating speed	Speed 3
Power requirements	115 Vac, 60 Hz
Power connection	6.0 ft (1.8 m) power cord, molded duplex plug with ground
Environment	Indoor use only
Max. working pressure	100 psi (689 kPa)
Ambient temperature	39°F (4°C) to 104°F (40°C)
Max. water temperature	140°F (60°C)
Clock timer	12-hour analog clock with AM/PM indication
Timer settings	Individual toggles for each 15 minute interval over 24 hours
Manual override	3 position slide switch, ON/OFF/AUTO
Pump casing	Stainless steel with 1¼" NPSM union threads
Impeller	PA66
Shaft	Ceramic
Bearings	Ceramic
Union tailpieces	Brass, ¾" FPT (two) and ¾" MPT (one)
Union gaskets	EPDM (two)
Approvals	 listed NSF-372 certified

ASTRO EXPRESS LF VALVE	
Housing	Forged Eco brass* with noryl cap
Internal components	Stainless steel and plastic with EPDM O-rings
Connections	Threaded, ½" hot and cold inlets, ¾" hot and cold outlets
Environment	Indoor use only
Flowrate adjustment	0 - 100%, multi-turn slotted screw
Max. working pressure	100 psi (689 kPa)
Max. water temperature	140°F (60°C)
Mounting	Plastic wall anchor with screw
Approvals	NSF-372 certified

* Complies with section 116875 at the California Health and Safety Code and Vermont Act 193 (lead content of wetted surface is 0.25% or less).

10.0 REPLACEMENT PARTS

PART DESCRIPTION	ITEM NUMBER
Astro 220SSU-T	110223B-244
¾" FPT union lead free* hardware kit	810120-324
¾" MPT Union lead free* tailpiece	810120-346
24-hour timer	810223B-130
Timer cover	110123-031
Astro express LF valve	561100LF-001

TORONTO

+1 416 755 2291

BUFFALO

+1 716 693 8813

BIRMINGHAM

+44 (0) 8444 145 145

MANCHESTER

+44 (0) 8444 145 145

BANGALORE

+91 (0) 80 4906 3555

SHANGHAI

+86 21 3756 6696